

Product Flyer


SOFTWARE

LASER PHOTO PLOTTERS

DIRECT IMAGERS

CAD Review

CAD Review station for viewing, analyzing and modifying CAD output data.

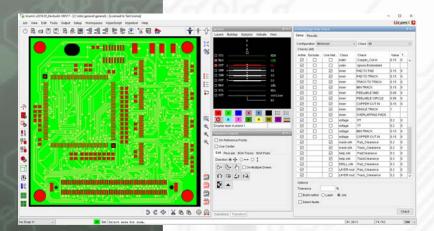

MARKETS

Rigid PCB Mfr ✓ Flex PCB Mfr ✓ Flex-Rigid PCB Mfr ✓ HDI PCB Mfr ✓ PCB Masslam Mfr ✓ PCB Equipment Mfr PCB Traders ✓ PCB Designers ✓ PCB Test Centers ✓ IC Packaging ✓ Chemical Milling ✓ High Resolution Graphic Arts ✓ Flat Panel Display ✓

PRODUCT FAMILIES

CAM ✓ PreCAM and Engineering ✓ Electrical Test ✓ Equipment Front Ends ✓ Format Converters & RIP's ✓ OEM Software ✓

Laser Photo Plotters Direct Imagers



Multi Core

Fast and automated data input of all major data formats

CAD Review offers the most comfortable way to read in all major data formats. It provides the tools for automated data input like Layer registration or aperture recognition.

DRC to check the data for manufacturability

Detect whether layouts correlate with the DFM requirements of the manufacturer. Specify the different production capabilities in the DRC checks to meet the standards of each company.

Measurement and query tools

The tools to measure or query the data are manifold. Measure object sizes, distances between points (based on midpoints or grid) or determine object coordinates are only a few examples. Query Objects provides detailed information of any object in the data.

- Ideal for Input and Output of all major formats. For example: UcamX job, DPF layers Gerber files ODB++
 - Excellon 1 and 2 ...
- Numerous methods to check and optimize data
- Security tools for preventing inadvertent modifications
- DFM check with your DRC rulesScripting

Optimize the data

With Edit functionality CAD Review allows modification of layouts. Add, insert, copy, move, step & repeat are only some of them. For example, make layout changes to determine if DFM classes can be met. Up the reliability of PCB's by adding Teardrops or adding copper balancing.

Board security tools

To up the security level when modifying data. Choose Net Compare after modifications to compare a job's current netlist information for electrical changings the layout. Add an additional layer of security by using "Image Compare".

Use this functionality to optically inspect complete job against a reference job, or verify any kind of layer (copper, drill, rout paths, solder masks, paste layers, silk screens ...) against a reference (dpf) layer. This protects against inadvertent modification.

Ucamco NV Bijenstraat 19, 9051 Gent, Belgium Tel: +32 9 216 99 00 - Fax: +32 9 216 99 12 E-mail: <u>info@ucamco.com</u>- Web: <u>www.ucamco.com</u>

Product Flyer



SOFTWARE

LASER PHOTO PLOTTERS

DIRECT IMAGERS

Panelization for assembly and production

Create a list of panels for assembly or production panels fitting to the requirements of each manufacturer. Verify which panel will get the highest material allocation or the easiest production process.

Copper calculation

The copper count analysis contains options for calculating the copper surface of a printed circuit board. Available calculation for a job, activated layers or inner layers.

FlashMaker

Some functions require pads to be flashed instead of painted. For others the conversion is recommended in order to obtain a result that truly reflects the state of a board. FlashMaker has been designed to enable you to handle 'draw to flash' conversions with minimum effort and maximum comfort.

Automation with Hypertool-Scripting


CAD Review offers the unique possibility to automate your workflow with Hypertool Scripting e.g. for automated layer, job input, automated modifications or data saving.

DRC checks: Specify different parameter sets to reflect different requirements and switch values with one click

Configuration min-gap_smartdrc		Ŷ	Class All			~								
Checks (All)		11-1-1-1		_					-					
Active Exclude text Use Netlist Cl	and the second se	in Rule Chec	8						ØΧ					
	Setup Re	suits												
	Configurat	ion TA-neu					Class All		~	1				
	Checks (All)										_	2200		
	Active	Exclude text	Use Netlist	CI			64) 					A A		
				out	Setup R	esults								
	Ø		Ø	out tuo	Configura	tion dremin			~	Class All		~		
					Checks (All)									
				out	Active	Exclude text	Use Netlist	Smart Des	ign Rula Cheo	e.				
				inn				Setup R	esults					
				inn	2				100 11 010			Alexa III		
					Ø			Configuration AL-018me-Klasse-A Class All Checks (All)						
				inn								and the second sec		
								Active		Use Netlist		Check		
				_	Ø		Ø				DRILL	Pad-Pad	0.3	0 0 5 5 0 5 5 0 5 5 0 5 0 0 0 0 0 0 0 0
				_				Ø			DRILL	OVERLAPPING PADS	-	-
				_				2			DRILL outer DRILL	PLATING NOT POSSIBLE PAD CLEARANCE	0.25	0
				_					N	outer DRILL	TRACK GLEARANCE	-	-	
				_				8	-	N	outer DRILL	MIN RING LAY2-LAY1		0 0
				_							outer DRILL	PAD CENTER TO CENTER	0.02	-
				_	Ø			2			outer DRILL	PARTIAL OVERLAP	0.02	
				_							LAYER	Exclude_Text	-	-
				_							LAYER	Pad-Pad	0.125	0
				_	Ø						LAYER	Pad-Track	0.125	
				_							LAYER	Track Track	0.125	
Options				_				2	Ø	Ø	LAYER	Min_Track	0.175	
Tolerance %				_	Ø						LAYER	Min_Pad_Size	0.25	
				_	2	-		M	Ø	M	LAYER	Peel_SMD	0.15	0
Build netlist O Layer Job				_	2						LAYER	Peel_Round	0.15	0
Select faults				_	Ø			Ø	Ø	Ø	LAYER	SINGLE TRACK	1	-
61016	Options								11110		silkmask	PAD CLEARANCE	0.1	0
	Tolerance		%		2					Ø	silk.mask	TRACK CLEARANCE	0.1	0
	Build I	netlist O La	yer () Job								LAYER.outline	PAD CLEARANCE	0.25	0
	Select	t faults			-						LAYER.outline	TRACK CLEARANCE	0.25	0
	Contect				Options						LAYER.outline	PARTIAL OVERLAP	1	
					Toleranc	0	%		-		LAYER.ritz	PAD CLEARANCE	0.45	
	-	_			8uild	netist OL	aver 🖲 Job				LAYER ritz	TRACK CLEARANCE	0.45	0
					Sele	t faults		2		Ø	LAYER.ritz	PARTIAL OVERLAP		
					N. S. S. S.			Options						
				_				Tolerand	e	%				
								Ruik	Inetlist OL	wer (i) lot				
										000				
								Sele	ci i alutes					
														C





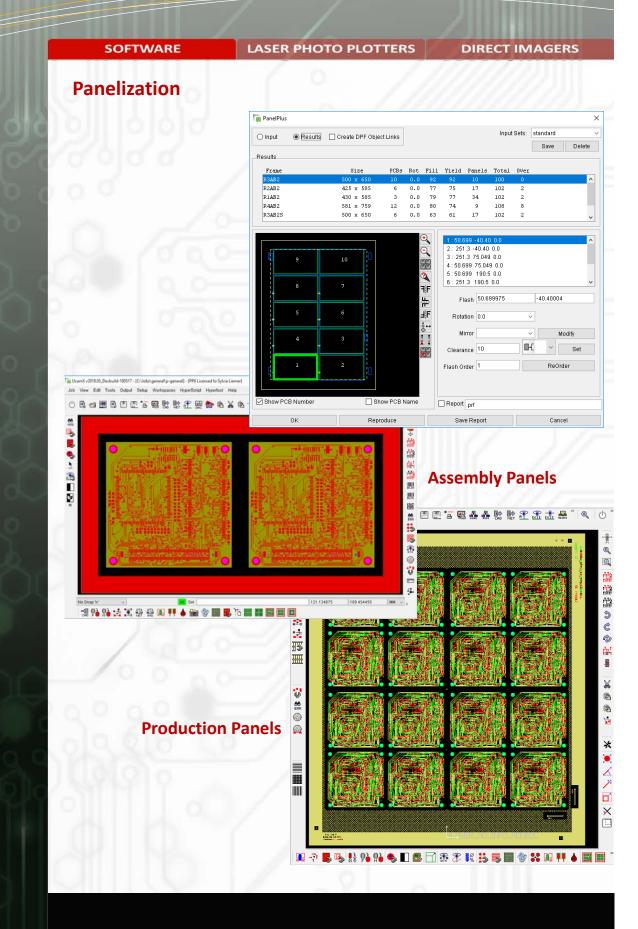

Direct link to CAD Review page on Ucamco's website



Gerber Format

Convey your design intent from CAD to CAM

Support for:

- CAD netlist
- Nested Step & Repeat

• Fabrication documentation

Scan this QR code to find:

- Gerber format info
- Gerber Reference Viewer
- Gerber format Specification



For more information on any of our products or services please contact us: Email: info@ucamco.com Web: www.ucamco.com

Teardrop

The UcamX v2018.05_Devbuild-180517 - [C:\Jobs\general\general\general_[PP8 Licensed to Sylvia Liemer] Job View Edit Tools Output Setup Workspaces HyperScript Hypertool Help


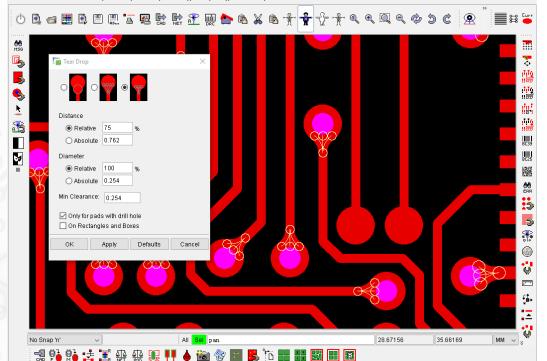


Image compare

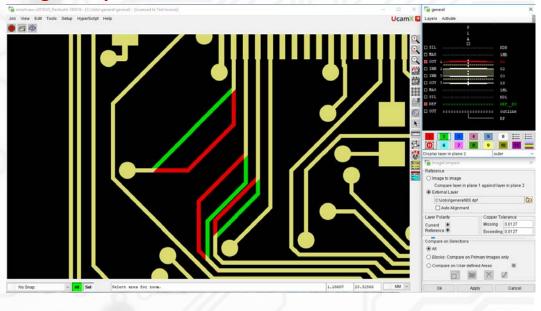

Ucamco protects your investments

Ucamco has a longstanding tradition of protecting its customer's investments. **CAD Review** is no exception: it seamlessly works with your existing **UCAMX** or **Integr8tor** environment and reuses all of the available software setups or precious automation that you have diligently gathered and carefully maintained over the years.

© Copyright Ucamco NV, Gent, Belgium

All rights reserved. No part of this document or its content may be re-distributed, reproduced or published, modified or not, in any form or in any way, electronically, mechanically, by print or any other means without prior written permission from Ucamco. The information contained herein is subject to change without prior notice. Revisions may be issued from time to time. This document supersedes all previous versions. Ucamco does not grant a license to the intellectual property contained in this document by publishing or otherwise providing it. The material, information and instructions herein are provided AS IS, without warranty of any kind. Ucamco does not warrant, guarantee or make any representations regarding the use, the inability to use or the results of the use of the information, representation or other affirmation of fact contained herein. Ucamco shall not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use the information contained herein. All product names cited are trademarks or registered trademarks of their respective owners.